










e-LOOP LED Displays









All e-loops have a red and a yellow LED. This quick reference describes what the LED display is showing in different contexts.



Regular Operation

- 
1 fast flash of Both LEDs.
 - System starting up.
- 
1 slow long flash of Both LEDs.
 - System lock-up reset.
- 

LEDs alternating continuously.
 - Magnetometer fail.
- 
Both LEDs flash rapidly.
 - Radar Fail.
- 
The yellow LED on solid.
 - Radio mode on.
- 
3 slow yellow LED flashes.
 - Low battery.
- 
Continuous rapid yellow LED flash.
 - Wakeup error.
- 
Both LEDs flash twice.
 - Outside valid temperature range.




Calibration

- 

Normal calibration
 - 2 Red LED flashes on set magnet activation.
 - 3 Red LED flashes on calibrate complete.
- 


Poor connection calibration
 - 2 Red LED flashes on set magnet activation.
 - 5 Yellow LED flashes.
 - 3 Red LED flashes on calibrate complete.
- 


No connection calibration
 - 2 Red LED flashes on set magnet activation.
 - 3 both LED flashes.
 - 3 Red LED flashes on calibrate complete.

Uncalibration

- 
4 Red LED flashes on set magnet activation.

Pairing

- 
1 Yellow LED flash code magnet activation.
 - Send pair request.
- 
1 Yellow LED flash
 - Pair successful.
- 
1 Red LED flash.
 - Pair failure.

