


Model No.
AXS12-4K-PC-BZ/WH
AXS12-3CCT-PC-BZ/WH

INSTALLATION, USAGE, & CARE GUIDE

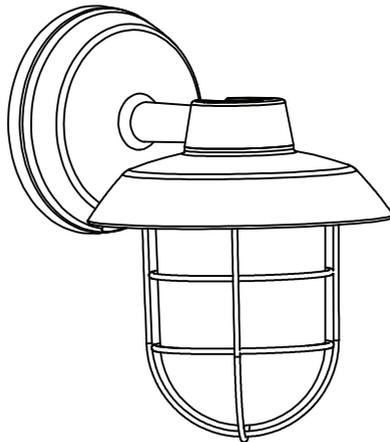

Questions? / Missing Parts? / Need Accessorie

Before returning to the store, call, text, or email
Customer Care 9am-5pm EST Monday to Friday.

1-844-870-5337

info@medinahpower.com

TABLE OF CONTENTS

| | | | |
|---------------------------------|----------|----------------------------------|-----------|
| Table of Contents | 2 | Hardware Included | 4 |
| Safety Information | 2 | Installation | 5 |
| Pre-Installation | 3 | Operation | 9 |
| Planning Installation..... | 3 | Care & Cleaning | 10 |
| Specifications..... | 3 | Troubleshooting | 10 |
| Tools Required..... | 3 | Warranty | 11 |
| Package Contents..... | 4 | | |

Safety Information

IMPORTANT

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

PRECAUTIONS

- Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- This light fixture requires a 120 Volt AC power source.
- Some codes require installation by a qualified electrician.
- This light fixture must be properly grounded.
- Make sure connections are secure using wire nuts, crimp-on lugs or other approved connecting devices
- This light fixture should be installed outdoors to a wall or eave.



WARNING: Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is off at the light fixture.



WARNING: Risk of fire. Keep the light fixture at least 3 in. (76mm) from combustible materials.



CAUTION: Burn hazard. Allow the light fixture to cool before touching.



NOTICE: Do not connect this fixture to a dimmer switch.



NOTICE: FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authorization to operate this equipment.



INFORMATION: The device is tested and found to comply with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) This device may not cause harmful interference and, (2) this device must accept any interference received, including any interference that may cause undesired operation.

These limits are designed to provide reasonable protections against harmful interference when the equipment is operated in a commercial environment.

PRE-INSTALLATION

PLANNING INSTALLATION

Before installing the light fixture, ensure that all parts are present. Compare parts with the *Hardware Included* and *Package Contents* sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this light fixture

SPECIFICATIONS

| | AXS12 | AXS12-3CCT |
|---|---|------------------------------|
| Lumens (Light Output) | 1000 Lumens | 1000 Lumens |
| Watts (Power Consumption) | 12 Watts LED | 12 Watts LED |
| Replaces | 75 W Incandescent | |
| Lumens/Watts (Efficacy) | 83 Lumens per watt | |
| Power Requirements (Input Voltage) | 120VAC | |
| Light Color (CCT) | 4000K (Cool White) | 3000K/4000K/5000K Adjustable |
| Dimmable | Non-Dimming (Do not wire to dimming switch) | |
| Operating Modes | Dusk-to-Dawn: Automatically turns light fixture ON during night and OFF during day. Switch-Controlled: Flip switch to turn light fixture ON and OFF. <i>Use included opaque light sensor cap on fixture's light sensor to utilize this mode setting.</i> | |

TOOLS REQUIRED



Phillips screwdriver



Wire strippers/cutters



Circuit tester



Silicone sealant



Work gloves




Ladder



Safety goggles

PRE-INSTALLATION (CONTINUED)

PACKAGE CONTENTS

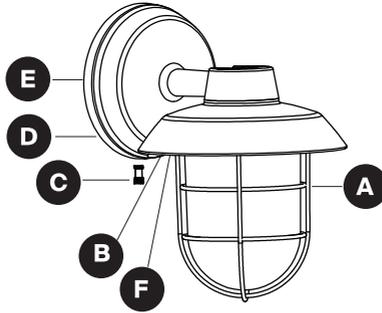

| Part | Description | Quantity |
|------|---|----------|
| A | Light fixture | 1 |
| B | Photocell (light sensor) | 1 |
| C | Mounting plate tightening screw (pre-installed) | 1 |
| D | Mounting plate with gasket (pre-installed) | 1 |
| E | Hanger wire for hands-free installation (pre-installed) | 1 |
| F | Black photocell cap (pre-installed) | 1 |

HARDWARE KIT



NOTE: Hardware *not* shown to actual size.

AA



BB



CC




| Part | Description | Quantity |
|------|---------------------------------|----------|
| AA | #8-32 x 3/4" Philips head screw | 2 |
| BB | Wire nut | 3 |
| CC | Screwdriver | 1 |

INSTALLATION

1 FOR BEST RESULTS

- Install light 5-10 feet above the ground.
- Do not mount fixture close to reflective surfaces such as windows, white walls, white surfaces and water.
- Do NOT wire to a dimming switch.

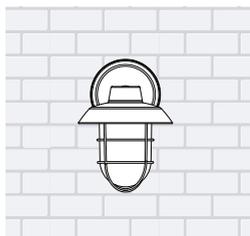

Wall Mount

(fig 1).




Ceiling Mount

(fig 2).



 Round



Octagonal


(fig 3).




NOTE: Mounting plate (D) mounts to standard recessed junction boxes. Junction box must be at least 1-1/2 inch in depth for proper installation for recessed mount application (fig 3).

2 SHUT OFF ELECTRIC POWER OFF

 
- Verify wall switch is in OFF position (fig 4).
- At the main electrical panel, turn off the circuit breaker that supplies power to the junction box you are working on (fig 5).
- For screw-in type fuses, unscrew the fuse that supplies power to the junction box you are working on (fig 6).



(fig 4).

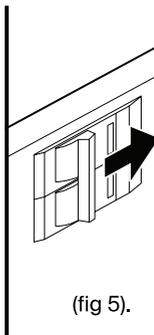

(fig 5).

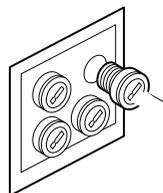

(fig 6).

INSTALLATION (CONTINUED)

3 REMOVE THE MOUNTING PLATE



NOTE: The mounting plate (D) comes pre-assembled on the light fixture (A) for shipping.




NOTE: The mounting plate tightening bolt (C) comes pre-installed on the light fixture.

- Remove the mounting plate (D) from the back of the fixture by loosening the mounting plate tightening screw (C) using the screwdriver (CC).




TIP: Only loosen the tightening screw (C) far enough to remove the mounting plate (D). Do not fully remove the tightening screw (C).

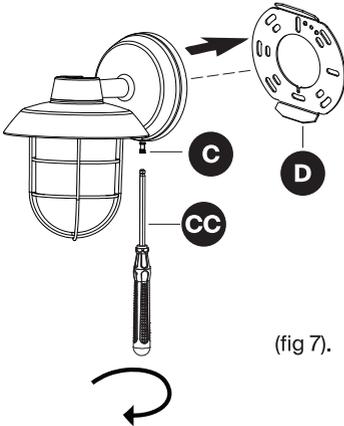

(fig 7).

4 INSTALL THE MOUNTING PLATE TO THE JUNCTION BOX

- Route the junction box wires through the large center hole in the mounting plate (D).
- Align the holes on the mounting plate (D) with the holes of the junction box. Use two #8 screws (AA), to attach the mounting plate (D) to the junction box.
- **Please make sure** the "TOP" arrow on the mounting plate is pointing up for wall mount or forward for ceiling mount.


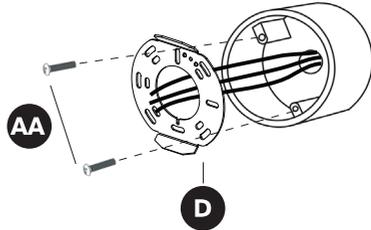


(fig 8).

INSTALLATION (CONTINUED)

5 HANG FIXTURE TO MOUNTING PLATE

- Place the small sphere head of the hanger wire (E) behind the back of the small groove located on the bottom of the center hole of the mounting plate (D).
- For ceiling mount application, pivot arm to vertical position as shown in (fig 9).

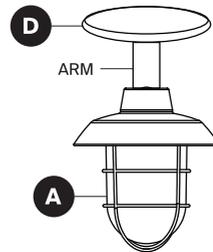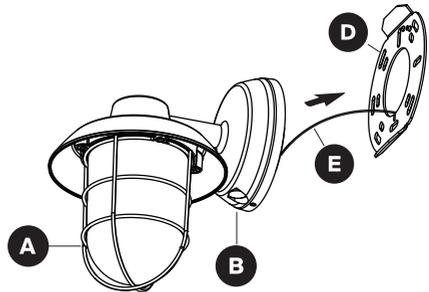




(fig 9).



TIP: Ensure the light fixture (A) can safely hang onto the mounting plate (D) to allow both hands to make the electrical connections (fig 9).

6 MAKE THE ELECTRICAL CONNECTIONS

 - If necessary, strip 3/8" of insulation from junction box and lighting fixture wires.
- Connect wires by twisting the exposed wires together and using the wire nuts (BB). Ensure no loose wires.
- Connect lighting fixture black wire to junction box black wire (line), lighting fixture white wire to junction box white wire (common), the junction box ground wire to the green lighting fixture ground wire, which is attached to the mounting plate (D)

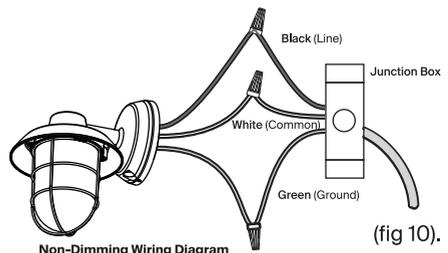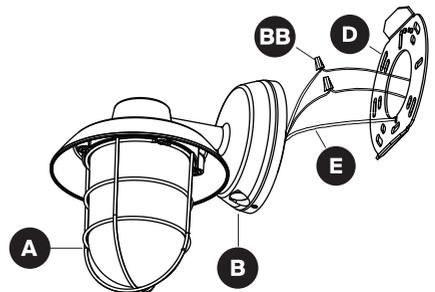

(fig 10).



TIP: Hold stripped ends near each other and align any frayed strands (do not twist wires).


Push the wires into wire nut (BB) and use your fingers to twist the wire nut clockwise until tight. Check for tightness by pulling wires.

Non-Dimming Wiring Diagram

INSTALLATION (CONTINUED)

7 SELECT COLOR TEMPERATURE SELECTION (Model AXS12-3CCT-PC-BZ Only)


- This product can be adjusted for color temperature from Warm White (3000K) to Bright White (4000K) to Daylight (5000K) by adjusting the three position switch located on the back of the mounting plate.
- The light fixture switch is shipped in the Bright White position. Adjust to desired temperature before final mounting.

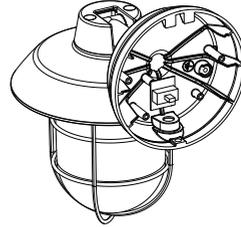

(fig 11).

8 MOUNT THE LIGHT FIXTURE


- Once wiring connections are done, place the light fixture (A) onto the mounting plate (D) so the top sloped groove on the plate rests on the top sloped groove on the back of the fixture.
- Verify the fixture is flush with the mounting surface (wall or ceiling) and photocell (B) is pointed downward for wall mount or forward for ceiling mount.
- Tighten the mounting plate tightening screw (C) on the bottom of the fixture (A) until the screw firmly pushes against the mounting plate (D).

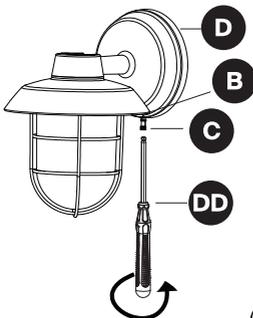

(fig 12).

9 CAULK AROUND THE LIGHT FIXTURE

- Caulk around the mounting plate (D) and surface with silicone sealant (not included).

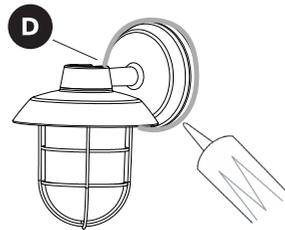

(fig 13).



NOTICE: Failure to properly caulk around the surface and mounting plate (D) could lead to water damage and is not covered under warranty.



NOTE: When attaching the light fixture (A) to a surface mount junction box, caulk between the mounting plate and junction box.

OPERATION

1 SELECT DUSK-TO-DAWN OR SWITCH-ACTIVATED CONTROL

OPTION 1: DUSK-TO-DAWN OPERATION


Dusk-to-dawn operation enables the light fixture to automatically turn ON when dark outside and turn OFF when the sun rises, thus saving you energy.

**AUTOMATIC
NIGHTTIME ON**



DAYTIME OFF

- To enable dusk-to-dawn operation, remove the black photocell cap (F) installed on the fixture. Note: Ensure the photocell is unobstructed.
- Ensure the switch powering the light fixture/ junction box is turned to the ON position and leave it ON at all times to enable automatic dusk-to-dawn operation.

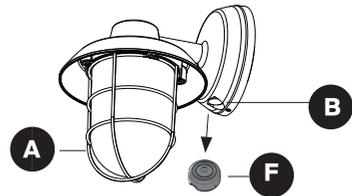

(fig 14).



TIP: To test if the light fixture and photocell work properly, run power to the fixture and cover the photocell to turn fixture ON. Shine a light into the photocell to see if fixture turns OFF.



NOTE: If photocell is located in an area under heavy shade, the photocell may not detect enough light and may turn the light fixture on.

OPTION 2: SWITCH CONTROLLED


Switch controlled operation enables the light fixture to turn ON and OFF by flipping a switch that controls the electricity to the junction box powering the fixture. The light fixture will not turn ON and OFF automatically, but is manually controlled.

SWITCH



CONTROLLED

- To enable switch activated operation, leave the black cap on the photocell (already installed on the fixture) and remove the instructions label.

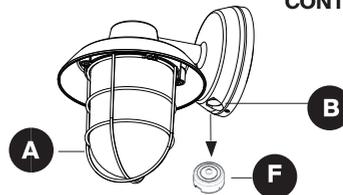

(Leave the black cap over the photocell)

(fig 15).

CARE AND CLEANING

- Shut off main power supply before cleaning the product. To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
- Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty.
- Do not spray the light fixture with a hose or power washer.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|---|---|
| Light does not turn ON | No power to the fixture | Check if circuit breaker is tripped Confirm wall switch is ON Verify wiring to fixture is correct (turn power off to fixture beforehand) |
| | Fixture is sensing daylight | Cover photocell. Wait several seconds until fixture turns ON. |
| Light cycles ON and OFF continuously | Photocell light sensor is sensing reflected light | Relocate light fixture to a location where there is no reflected light. OR place the black photocell cap over the photocell and use the wall switch to turn the light fixture ON and OFF. |
| Light FLICKERS | The light fixture is wired through an unsuitable dimmer | Replace the dimmer with a 0-10V dimming switch or a standard ON/OFF wall switch. |
| Light stays ON | Photocell is in a shaded area | Shine a flashlight into the photocell and wait a couple minutes. If the light turns OFF, the fixture should be moved to a location with enough light in the daylight hours for the photocell to work. OR place the black photocell cap over the photocell and use the wall switch to turn the light ON and OFF. |
| | Photocell is faulty | If the light does not turn off when a flashlight is shone on the photocell for a few minutes, then the photocell may be faulty. Please contact customer service. |



NOTE: Photocell may have a few minutes delay during troubleshooting. When testing, shine a light and/or cover the photocell and allow a few minutes for fixture to function properly.

5-YEAR LIMITED WARRANTY

This is a limited warranty offered by Manufacturer for a period of five years from the date of purchase to its customers. Manufacturer warrants to customers that the products will be free from defects in material and workmanship. The obligation of Manufacturer under this warranty is limited to the provision of replacement of products and is extended to the original purchaser of the product on presenting valid purchase receipt or other proof of date of original purchase acceptable to Manufacturer. The receipt is required for rendering the warranty performance. Any warranty claims without original proof of purchase would not be accepted.

It should be noted that the warranty does not apply to Manufacturer products that have been altered or repaired by unauthorized personnel, have been subjected to neglect, abuse, misuse or accident or damages caused during shipping. Any other products not manufactured by Manufacturer which have been supplied, installed and/or used in conjunction with Manufacturer products are not covered under this warranty. Any damages caused by replacements bulbs, LEDs or corrosion or discoloration of brass components are also not covered by this warranty.

Limitation of Liability:

In no event Manufacturer shall be liable for indirect, consequential, incidental or special damages, or lost profits. Manufacturer is not liable for any claims or damage arising out of or connected with the manufacture, sale, delivery, use, maintenance and repair or modification of Manufacturer products, or supply of any replacement parts that, exceed the purchase price of Manufacturer products giving rise to a claim. Labor charges to remove or install the fixtures will not be accepted.

To Claim:

Please contact manufacturer customer service at 1-844-870-5337 or email info@medinahpower.com and include your name, address and contact number, along with a copy of the purchase receipt and a brief description of the problem.

Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call or email our
Lighting Specialists 9am-5pm EST Monday to Friday.

1-844-870-5337

info@medinahpower.com