


## SOLAR WALL PACK

### INSTALLATION, USAGE, & CARE GUIDE

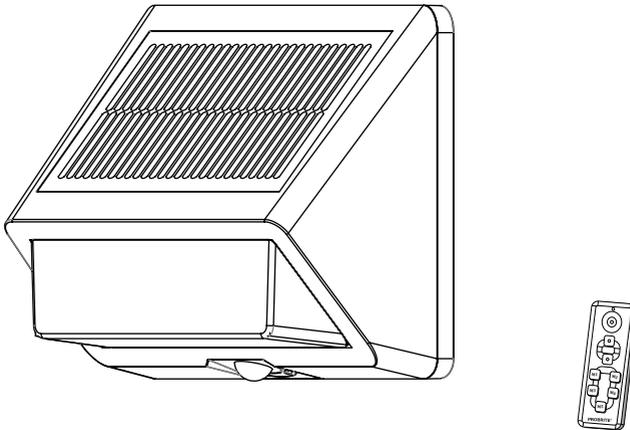

#### Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call or email PROBRITE  
Customer Service 9am-5pm EST Monday to Friday.

**1-844-507-5651**

[support@PROBRITE.com](mailto:support@PROBRITE.com)

[PROBRITE.COM](http://PROBRITE.COM)

---

Visit us online anytime or call us to get information on our product range, download detailed spec & photometric files, find product and mounting accessories, view installation tutorials and videos, and learn about our DLC® rebate eligible products.

## TABLE OF CONTENTS

<b>Table of Contents</b> .....	2	Hardware Included.....	4
<b>Safety Information</b> .....	2	<b>Installation</b> .....	5
<b>Pre-Installation</b> .....	2	Wall Mount Installation.....	5
Planning Installation.....	2	<b>Operation</b> .....	6
Specifications.....	3	<b>Care &amp; Cleaning</b> .....	8
Tools Required.....	4	<b>Troubleshooting</b> .....	9
Package Contents.....	4	<b>Warranty</b> .....	9


## SAFETY INFORMATION

### IMPORTANT

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

### PRECAUTIONS

- Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- This light fixture requires no power source other than included solar panel.
- Make sure connections are secure using intergal plug-and-tighten cable connectors.
- This light fixture should be installed outdoors to a wall or a wooden pole.
- This solar panel should be installed outdoors with direct sunlight access; Can be mounted on ground, wall or rooftop.

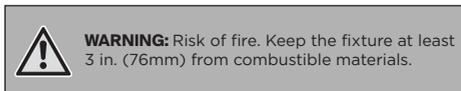

## PRE-INSTALLATION

### PLANNING INSTALLATION

Before installing the light fixture, ensure that all parts are present. Compare parts with the **Hardware Included** and **Package Contents** sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this light fixture.

## PRE-INSTALLATION (CONTINUED)

### SPECIFICATIONS

MODEL	SPRW 15	SPRW 45
<b>Lumens (Light Output)</b>	Up to 1500 Lumens	Up to 4000 Lumens
<b>Max Watts</b>	12 Watts	35 Watts
<b>Lumens/Watts (Efficacy)</b>	125 Lumens per Watt	114 Lumens per Watt
<b>Power Consumption</b>	2 (M1) / 1.5 (M2) / 1 (M3) / 8 (M4) / 7 (M5) W (integral battery)	4(M1) / 3 (M2) / 2 (M3) / 16 (M4) / 14 (M5) W (integral battery)
<b>Battery Capacity</b>	3.2V 6000mah	6.4V 6000mah
<b>Charging</b>	8 hrs (solar panel included)	
<b>Light Color (CCT)</b>	5000K	
<b>Dimmable (Operated by Remote Control)</b>	20% / 40% / 60% / 80% / 100%	
<b>Operation Modes (Operated by Remote Control)</b>	<p><b>Mode 1: 4Hr Mode</b></p> <ul style="list-style-type: none"> <li>● 150 Lumens for 4 hrs</li> <li>● 1500 Lumens when motion detected</li> </ul> <p><b>Mode 2: All-night Mode</b></p> <ul style="list-style-type: none"> <li>● 105 Lumens for 4 hrs</li> <li>● 30 Lumens for 8 hrs</li> <li>● 975 Lumens when motion detected</li> </ul> <p><b>Mode 3: Energy Saving Mode</b></p> <ul style="list-style-type: none"> <li>● 90 Lumens for 4 hrs</li> <li>● 30 Lumens for 10 hrs</li> <li>● 675 Lumens when motion detected</li> </ul> <p><b>Mode 4: Motion-only</b></p> <ul style="list-style-type: none"> <li>● 1500 Lumens when motion detected</li> </ul> <p><b>Mode 5: Occupancy Mode</b></p> <ul style="list-style-type: none"> <li>● First trigger: 1050 Lumens for 20 secs</li> <li>● Second trigger: 675 Lumens for 30 mins</li> <li>● Third trigger: 345 Lumens for 4 hrs</li> </ul>	<p><b>Mode 1: 4Hr Mode</b></p> <ul style="list-style-type: none"> <li>● 400 Lumens for 4 hrs</li> <li>● 4000 Lumens when motion detected</li> </ul> <p><b>Mode 2: All-night Mode</b></p> <ul style="list-style-type: none"> <li>● 280 Lumens for 4 hrs</li> <li>● 80 Lumens for 8 hrs</li> <li>● 2600 Lumens when motion detected</li> </ul> <p><b>Mode 3: Energy Saving Mode</b></p> <ul style="list-style-type: none"> <li>● 240 Lumens for 4 hrs</li> <li>● 80 Lumens for 10 hrs</li> <li>● 1800 Lumens when motion detected</li> </ul> <p><b>Mode 4: Motion-only</b></p> <ul style="list-style-type: none"> <li>● 4000 Lumens when motion detected</li> </ul> <p><b>Mode 5: Occupancy Mode</b></p> <ul style="list-style-type: none"> <li>● First trigger: 2800 Lumens for 20 secs</li> <li>● Second trigger: 1800 Lumens for 30 mins</li> <li>● Third trigger: 920 Lumens for 4 hrs</li> </ul>

## PRE-INSTALLATION (CONTINUED)

### TOOLS REQUIRED



Power Drill






Wrench



Ladder

### PACKAGE CONTENTS

Part	Description	Quantity
<b>A</b>	Light fixture	1
<b>B</b>	Integral motion sensor	1
<b>C</b>	Integral solar panel	1
<b>D</b>	Mounting bracket	1
<b>E</b>	Remote control	1

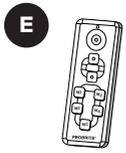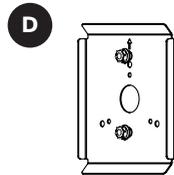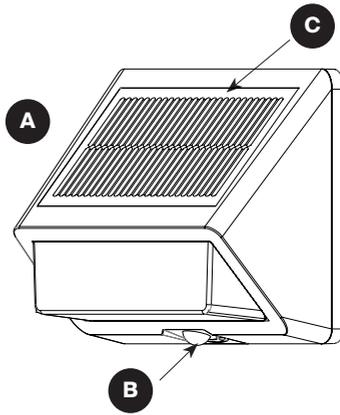

(Battery included)

### HARDWARE KIT



**NOTE:** Hardware *not* shown to actual size.

Part	Description	Quantity
<b>AA</b>	Hex head screws	3
<b>BB</b>	Set screw	1
<b>CC</b>	Allen Key	1

**AA**



**BB**



**CC**



## WALL MOUNT INSTALLATION

### 1 FOR BEST RESULTS




**CAUTION:** Do not tamper with motion sensor as it is wired into fixture.

- When mounting the fixture, ensure the motion sensor (B) has clear line of sight to target area for motion detection.
- Ensure integral solar panel (C) has direct sunlight exposure.
- Do NOT connect fixture to any wires or power supply.
- Hardware provided to mount fixture to wood. Concrete walls will require alternate hardware (not included).

### 2 INSTALL FIXTURE TO THE WALL

- Position the mounting bracket (D) with the arrow pointing up as shown in (Fig 1).
- Drill 2 holes as shown in (Fig 1).
- Attach bracket firmly to wall with the hex head screws (AA).
- Hang the fixture onto the mounting bracket (D).
- Secure light fixture to mounting bracket (D) by tightening set screw (BB) to bottom of fixture housing (Fig 1).

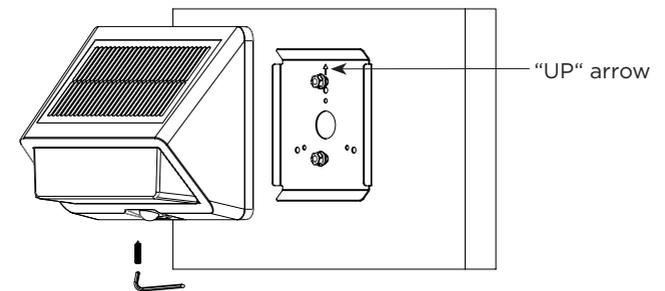

(Fig 1).


Recommended mounting heights:  
 SPRW15 - up to 12'  
 SPRW45 - up to 20'

# OPERATION

## 1 REMOTE CONTROL OPERATION

### MODES OF OPERATION

(Operate at maximum of 25ft from the fixture)

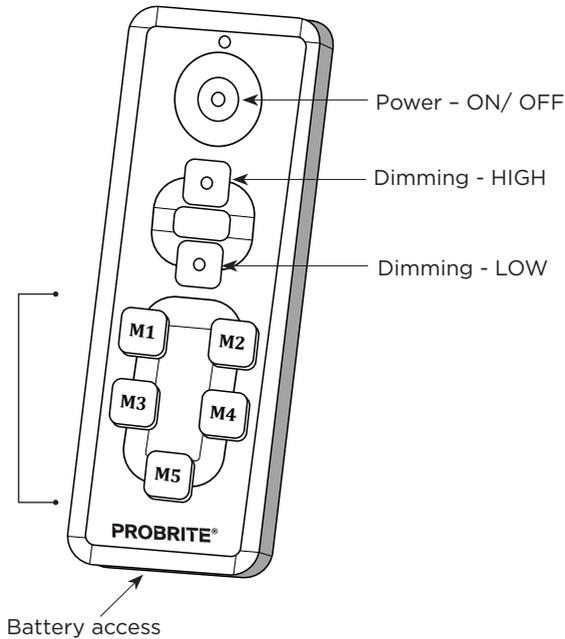


**NOTE:** Lumens are depicted below with the following format: SPRW15 (SPRW45).

### SELECT MODE WITH REMOTE CONTROL

#### OPTION 1: 4 HOURS MODE (M1)

4 HOURS MODE enables the light fixture to turn ON for 4 hours at 150 (400) lumens ambient light. Upon motion detection, light emits 1500 (4000) lumens for security lighting.

- Once this mode is selected it will remain in the current mode until the fixture is manually turned off through the remote control.
- Dimming will be proportionate to the lumens in the selected mode, until the fixture is manually turned off or a new mode has been selected.

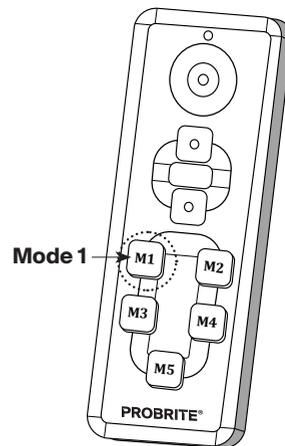


# OPERATION (CONTINUED)

#### OPTION 2: ALL-NIGHT MODE (M2)

ALL-NIGHT MODE enables the light fixture to turn on for first 4 hours at 105 (280) lumens, followed by 8 hours at 80 lumens for lighting through out the night Upon motion detection, light emits 975 (2600) lumens.


- Once this mode is selected, it will remain in the current mode until the fixture is manually turned off through the remote control.
- Dimming will be proportionate to the lumens in the selected mode, until the fixture is manually turned off or a new mode has been selected.

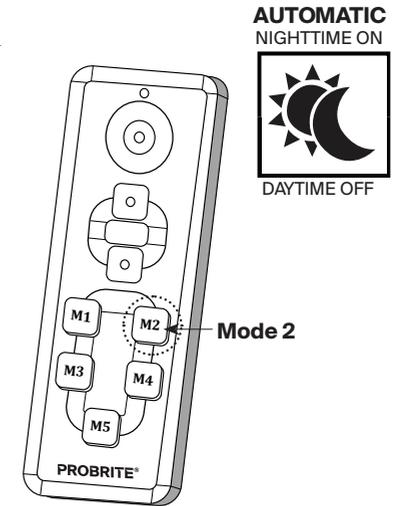

#### OPTION 3: ENERGY-SAVING MODE (M3)

ENERGY-SAVING MODE enables the light fixture to turn on for first 4 hours at 90 (240) lumens, followed by 10 hours at 30 (80) lumens to conserve the battery. Upon motion detection, light emits 675 (1800) lumens.

- Once this mode is selected, it will remain in the current mode until the fixture is manually turned off through the remote control.
- Dimming will be proportionate to the lumens in the selected mode, until the fixture is manually turned off or a new mode has been selected.

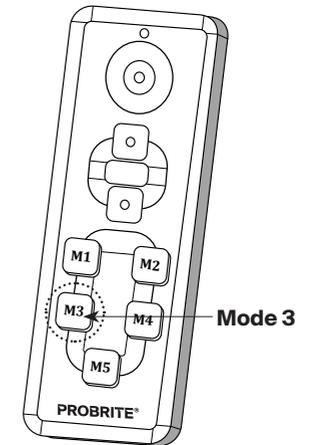

## OPERATION (CONTINUED)

### OPTION 4: MOTION-ONLY MODE (M4)


*MOTION-ONLY MODE enables the light fixture to turn on ONLY when motion is detected. Upon motion detection, light emits 1500 (4000) lumens for maximum security lighting.*

- Once this mode is selected, it will remain in the current mode until the fixture is manually turned off through the remote control.
- Dimming is unavailable in this mode.

### OPTION 5: OCCUPANCY MODE (M5)

*OCCUPANCY MODE enables the light fixture to turn on ONLY when motion is detected:*


- 1<sup>st</sup> trigger: 1050 (2800) lumens for 20 seconds
- 2<sup>nd</sup> trigger: 675 (1800) lumens for 30 minutes
- 3<sup>rd</sup> trigger: 345 (920) lumens for 4 hours
- Once this mode is selected, it will remain in the current mode until the fixture is manually turned off through the remote control.
- Dimming is unavailable in this mode.

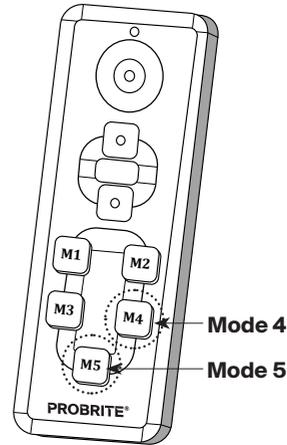

## 2 MANUAL OPERATION

### ON-FIXTURE CONTROLS:

- Power - depress button on left of motion sensor for ON/OFF operation (see "ON" temporary sticker).
- Depress button on right of motion sensor for Mode. Continue pressing button until desired Mode is achieved (see "MODE" temporary sticker).

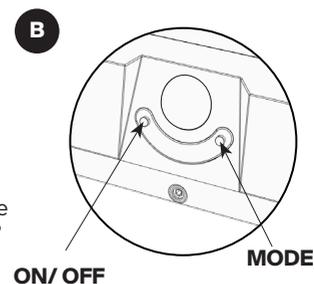

## CARE AND CLEANING

- Clean the solar panel with clear water and a soft damp cloth on a regular basis to ensure batteries can fully charge.
- To prolong the original appearance of the light fixture clean with clear water and a soft, damp cloth only.
- Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty.
- Do not spray the light fixture with a hose or power washer.

## TROUBLE SHOOTING

Problem	Possible Cause	Solution
<b>Light does not turn ON</b>	Low battery	Check the power meter on the integral motion sensor. If red, the battery needs to be charged for 8 hours before use. Check that cable connection is secure. Ensure the solar panel has exposure to sunlight and that there is no debris covering the solar panel.
	No motion detected	Check if the motion sensor is blocked by obstacle or dirt.
<b>Remote control unresponsive</b>	Low battery on the remote	Replace the battery cell (3V Lithium CRV2032) on the remote.
	Angle and distance	Turn the light OFF and ON under different angles and distances.
<b>Light not bright enough</b>	Wrong mode selected	Turn the light OFF and ON again to select a mode with higher output.
<b>Light cycles ON and OFF continuously</b>	Motion sensor is faulty	Clean the motion sensor with a damp, clean cloth. If the problem persists, please contact customer service.

## LIMITED WARRANTY

This is a limited warranty offered by Probrite for one year from the date of purchase to its customers. Probrite warrants to customers that the product will be free from defects in material and workmanship. The obligation of Probrite under this warranty is limited to the provision of replacement of product and is extended to the original purchaser of the product on presenting valid purchase receipt or other proof of date of original purchase acceptable to Probrite. The receipt is required for rendering the warranty performance. Any warranty claims without original proof of purchase would not be accepted.

It should be noted that the warranty does not apply to Probrite products that have been altered or repaired by unauthorized personnel, have been subjected to neglect, abuse, misuse or accident or damages caused during shipping. Any other products not manufactured by Probrite which have been supplied, installed and/or used in conjunction with Probrite products are not covered under this warranty. Any damages caused by replacements bulbs, LEDs or corrosion or discoloration of brass components are also not covered by this warranty.

### LIMITATION OF LIABILITY:

In no event Probrite shall be liable for indirect, consequential, incidental or special damages, or lost profits. Probrite is not liable for any claims or damage arising out of or connected with the manufacture, sale, delivery, use, maintenance and repair or modification of Probrite products, or supply of any replacement parts that exceed the purchase price of Probrite products, giving rise to a claim. Labor charges to remove or install the fixtures will not be accepted.

### TO CLAIM:

Please contact PROBRITE customer service at 1-844-507-5651 or email support@PROBRITE.com and include your name, address and contact number, along with a copy of the purchase receipt and a brief description of the problem.

# PROBRITE™

## **Questions? / Problems? / Missing Parts? / Need Accessories?**

Before returning to the store, call or email PROBRITE  
Customer Service 9am-5pm EST Monday to Friday.

1-844-507-5651

support@PROBRITE.com

PROBRITE.COM

## **RETAIN THIS MANUAL FOR FUTURE USE**

Para las traducciones en español,  
visit [www.probrite.com/install](http://www.probrite.com/install)