

# Emergency Wall Pack Installation Instructions

**THIS INSTALL MANUAL IS APPLICABLE FOR  
MODEL NO : WEL-15W-3CCT-BZ**

## SAFETY INFORMATION

### IMPORTANT

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

### PRECAUTIONS

- Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- This light fixture requires a 120-277VAC power source.
- Some codes require installation by a qualified electrician.
- This light fixture must be properly grounded.
- Make sure connections are secure using wire nuts, crimp-on lugs or other approved connecting devices.
- This light fixture should be installed indoors to a ceiling, recessed mount application



**WARNING:** Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is off at the light fixture.



**CAUTION:** Burn hazard. Allow the light fixture to cool before touching.



**NOTICE:** If using dimming function, only connect to 0-10V approved dimming switches or control system



**NOTICE:** FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authorization to operate this equipment.



**INFORMATION:** The device is tested and found to comply with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) This device may not cause harmful interference and, (2) this device must accept any interference received, including any interference that may cause undesired operation. These limits are designed to provide reasonable protections against harmful interference when the equipment is operated in a commercial environment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Follow the steps below to install your Emergency Wall Pack

### TOOLS REQUIRED



**Philips  
Screwdriver**



**Wire  
stripper**




**Electrical  
tape**

# Emergency Wall Pack Installation Instructions

## INSTALLATION


### Before Installation:

1. Turn off power to the installation site to prevent electrical hazards.

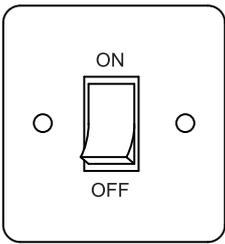


### Steps:


2. Remove the rubber plug and loosen the screws to access the mounting plate.

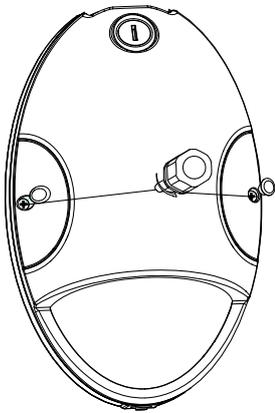


3. Remove the 1/2" end cap.

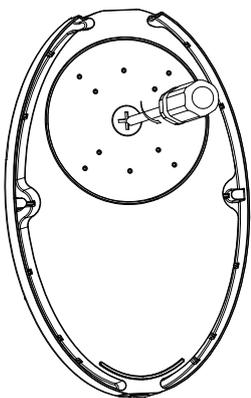

4. Peel off the yellow sticker and adhere it to the designated round area on the bottom plate.

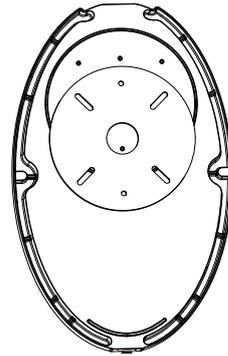


5. Fix the bottom plate onto the mounting surface using screws.

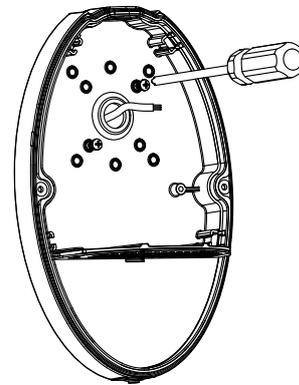

6. Connect the wires:

- AC-L (Black/Brown)
- AC-N (White/Blue)
- Ensure DIM+ and DIM- wires are connected if dimming functionality is required.

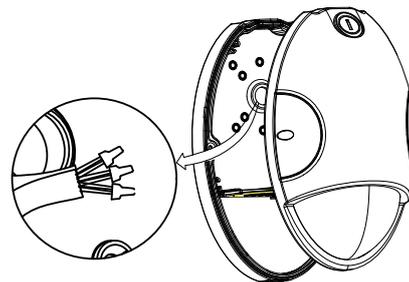


# Emergency Wall Pack Installation Instructions

## INSTALLATION


### Before Installation:

7. Double-check all wiring connections to ensure proper insulation and grounding.

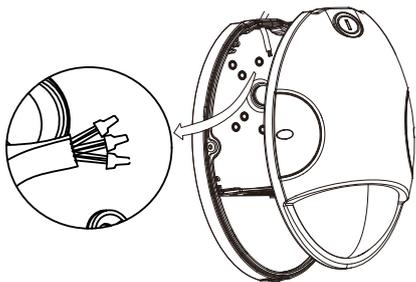


### Steps:

8. Attach the fixture to the bottom plate using screws and seal the two holes with rubber plugs.

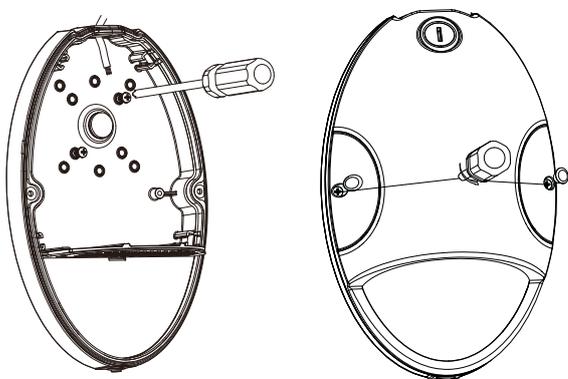


9. Verify all screws are secure, and turn on the power to test the light.

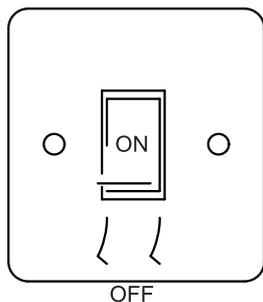

### Color Temperature Adjustment

The LED Wall Pack includes a DIP switch for adjusting the color temperature:


- Set to 3500K for warm white lighting.
- Set to 4000K for neutral white lighting.
- Set to 5000K for daylight white lighting.

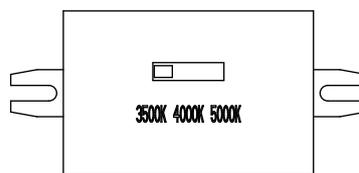

Ensure the desired setting is selected before completing the installation.


### Emergency Test Button Instructions

- If equipped with an emergency backup driver:
  - Confirm the battery connection is secure.
  - Use the emergency test button to verify backup operation.

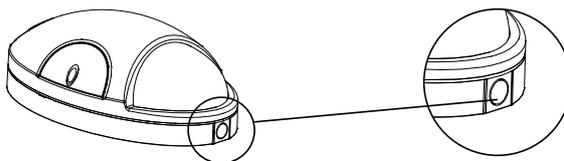

### Wiring Diagrams

- If equipped with an emergency backup driver:
  - Confirm the battery connection is secure.
  - Use the emergency test button to verify backup operation.

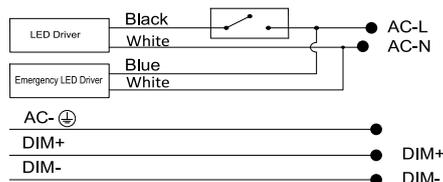

### With Emergency Backup Driver:

1. Refer to the fixture's wiring label for proper connections.

# Emergency Wall Pack

## Installation Instructions

### INSTALLATION

---

#### MAINTENANCE AND TROUBLESHOOTING

Common Issues and Solutions:

Wipe with a soft, damp cloth and mild detergent.

##### 1. Light Does Not Turn On:

- Verify the power supply is active.
- Check wiring connections.

##### 2. Flickering or Uneven Light:

- Ensure DIM+ and DIM- connections are secure.
- Confirm voltage compatibility.

##### 3. Emergency Backup Failure:

- Check battery connections.
- Replace the backup driver if necessary.

##### Maintenance:

- Regularly clean the fixture to maintain optimal light output.
- Inspect wiring connections periodically for wear or damage.

#### WARRANTY AND CUSTOMER SUPPORT

The Manufacturer offers a 5-year limited warranty on all lighting products, covering repair, replacement, or prorated refunds for manufacturing defects during the warranty period or 50,000 hours of operation, whichever is sooner. This warranty is valid only for products installed per the Manufacturer's guidelines by certified electricians and used as intended. Unauthorized modifications, improper use, or damage caused by external factors such as power surges, accidents, or environmental conditions are not covered. To claim warranty service, customers must provide proof of purchase, installation details, and photos of the defective product. Replacement products carry the same warranty period as the original. The warranty does not include installation costs unless pre-approved by the Manufacturer. For assistance, please contact customer service at +1 (844) 870-5337.