

USER MANUAL

VIBRATION METER

PCE-VT 3700 SERIES

ENGLISH



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski) can be found via our product search on:
www.pce-instruments.com

1. SAFETY NOTES

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- » The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- » The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- » Do not expose the device to shocks or strong vibrations.
- » The case should only be opened by qualified PCE Instruments personnel.
- » Never use the instrument when your hands are wet.
- » You must not make any technical changes to the device.
- » The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- » The device must only be used with accessories from PCE Instruments or equivalent.
- » Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- » Do not use the instrument in explosive atmospheres.
- » The measurement ranges as stated in the specifications must not be exceeded under any circumstances.
- » Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business. If you have any questions, please contact PCE Instruments. The contact details can be found at the end of this manual.

2. SYSTEM DESCRIPTION

2.1 Device

The vibration meter PCE-VT 3700 is capable of measuring different vibration severity parameters and is thus suitable for machine condition monitoring. The measuring units include vibration acceleration, vibration velocity and vibration displacement. The vibration signal can be evaluated for RMS, peak, peak-peak and crest factor which is shown as the measurement value on the screen. These measurements can be used to detect and identify machine imbalances which can lead to e. g. bearing damage.

Apart from a Hold function which freezes the current measurement value, the device also includes a function to show the max value. During a session this function displays the highest measurement value acquired so far in addition to the current measurement value.


Another feature which consists of automatic evaluation of the measurement value with regards to the ISO standard 10816-3. When this feature is enabled the measurement value is compared against the three vibration thresholds described in the ISO standard and the current vibration severity zone is displayed through color coding of the value on the screen.

1. Display
2. Function keys
3. Sensor connector
4. Vibration sensor
5. Magnet adapter
6. Headphone connector



2.2 Display (measurement screen)

1. Date and time
2. Battery level
3. Measuring unit
4. Frequency filter
5. Parameter
6. HOLD on/off
7. Measurement value
8. Max value
9. Set ISO group
10. Vibration severity zone

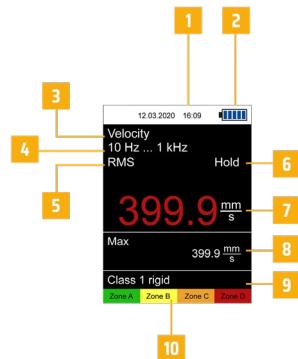

2.3 Function keys

Key	Description	Functions
	On/Off	Turn device on/off
	Menu	Open main menu
	Back	Cancel, return, reset max. value
	OK	Confirm
	Hold	Hold current measurement value
	Up	Menu up
	Down	Menu down
	Right	Menu right
	Left	Menu left

3. SPECIFICATIONS

3.1 Technical specifications

Vibration meter PCE-VT 3700	
Measurement range	Vibration acceleration 0,0 ... 399,9 m/s ² Vibration velocity 0,0 ... 399,9 mm/s Vibration displacement 0,0 ... 3,9 mm
Parameter	RMS, peak, peak-peak, crest factor
Accuracy Reference frequency 160 Hz	±2 %
Precision	Vibration acceleration 0,1 m/s ² Vibration velocity 0,1 mm/s Vibration displacement 1,0 µm
Frequency range	Vibration acceleration 10 Hz ... 10 kHz Vibration acceleration 1 kHz ... 10 kHz Vibration velocity 10 Hz ... 1 kHz Vibration displacement 10 Hz ... 200 Hz
General Specifications	
Display	2,8" LCD
Units	Metric / imperial
Languages	English, German, French, Spanish, Italian, Dutch, Portuguese, Turkish, Polish, Russian, Chinese, Japanese
Operating / storing conditions	Temperature: -20 °C ... +65 °C Humidity: 10 ... 95 % r. F., non-condensing
Power supply	3 x 1,5 V AA Battery
Protection	IP 52
Audio output (PCE-VT 3750 only)	3,5 mm audio jack
Dimensions	165 x 85 x 32 mm
Weight	239 g

Vibration sensor	
Resonance frequency	24 kHz
Transverse sensitivity	≤5 %
Destruction limit	5000 g (peak)
Operating/storage conditions	Temperature: -55 °C ... +150 °C
Housing material	Stainless steel
Mounting thread	1/4" - 28 UNF
Dimensions	Ø 17 x 46 mm (PCE-VT 3xxx SENSOR) Ø 29 x 81 mm (PCE-VT 3xxxS SENSOR)
Weight (without cable)	52 g (PCE-VT 3xxx SENSOR) 119 g (PCE-VT 3xxxS SENSOR)

3.2 Delivery contents

- 1x Vibration meter PCE-VT 3700
- 1x Sensor with spiral cable
- 1x Magnetic adapter
- 1x Needle adapter (Only PCE-VT 37x05)
- 1x Headphone (Only PCE-VT 3750 / PCE-VT 3750S)
- 3 x 1,5 V AA Batteries
- 1x Quickstart Guide
- 1x Servicebag (PCE-VT 3700 / PCE-VT 3700S)
- 1x Hardcase (PCE-VT 3750 / PCE-VT 3750S)

3.3 Accessories

3.2.1 Magnet adapter PCE-VT-VMH

Instead of a stud bolt the magnet adapter PCE-VT-VMH can be used attach the sensor to magnetic surfaces.



3.3.2 PCE-VT 3xxxS SENSOR

The ergonomic handle with an integrated sensor can be used in conjunction with the measuring tip to measure at locations which are difficult to access.



3.3.3 Measuring tip PCE-VT-NP

For inaccessible measurement locations or if only a quick, temporary measurement is sufficient, the measuring tip PCE-VT-NP can be used to perform these measurements. The measuring tip should be placed as vertical as possible on the measurement surface in order to get accurate measurements.



3.2.6 Headphone PCE-VT 3x5x HEADPHONE (Only PCE-VT 3750 und PCE-VT 3750S)


The headphones are used to use the vibration meter as a stethoscope. This facilitates, among other things, the rapid detection of damage to machinery and equipment.

4. GETTING STARTED

4.1 Power supply

Three AA-batteries are used to power the vibration meter. The battery compartment is on the back of the device. The device should be turned off before the batteries are replaced. In order to replace the batteries, the two screws which hold the cover in place need to be removed.

Afterwards the cover can be removed so the batteries can be inserted in the compartment. The compartment can then be closed by installing the cover and fastening the two screws. The current battery level is displayed in the top right corner of the screen. If the battery charge is insufficient for proper operation of the device the device automatically powers off and the screen below is shown on the display.

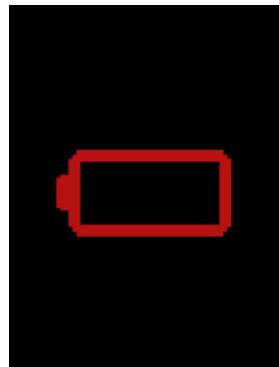

4.2 Preparation

Connect the sensor with the spiral cable to the vibration meter before turning it on. The knurled nuts should be tightened to ensure proper connection. In order to turn on the device, the ON/OFF button needs to be pressed until the screen backlight turns on and the start-up screen is shown.

The start-up screen is shown for about 2 seconds and the device automatically switches to the measurement screen afterwards. The device is turned off by pressing the ON/OFF button until the screen backlight turns off. The following icon is displayed on the start-up screen if date and time need to be set:



5. MENU


The main menu can be reached from any screen by pressing the MENU button. The arrow keys are used to navigate the menu items which can be activated with the OK button. The BACK button is used to return from sub menus. The main menu consists of the sub menus Measurement, Calibration, Settings and Info which are explained in detail below.

5.1 Measurement

The sub menu Measurement is used to configure the different options of the vibration measurement: Measuring unit, parameter, ISO evaluation, display max value.


5.1.1 Measuring unit

The measuring unit and the respective frequency range can be adjusted with this menu. The options include acceleration a (10 Hz ... 10 kHz), acceleration a (1 kHz ... 10 kHz), velocity v (10 Hz ... 1 kHz) and displacement d (10 Hz ... 200 Hz). This sub menu can also be directly accessed from the main screen by pressing the left arrow key.

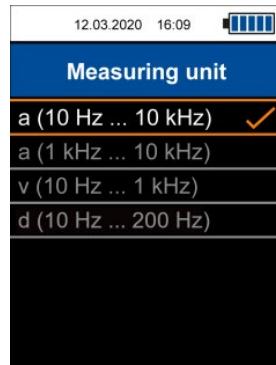

5.1.2 Parameter



This sub menu is used to adjust the metric of the measured vibration which is displayed as the measurement value on the main screen. It is possible to switch between RMS, peak, peak-peak and crest factor. This sub menu can also be directly accessed from the main screen by pressing the right arrow key.

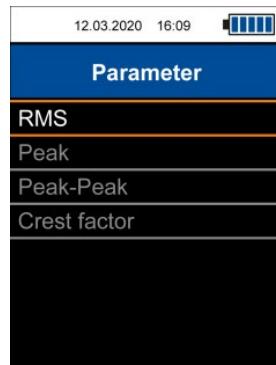

5.1.3 ISO evaluation

In order to enable the automatic evaluation of the current measurement value according to the ISO standard 10816-3, the measuring unit vibration acceleration or vibration velocity in conjunction with the parameter RMS need to be selected. This is necessary since the ISO standard only lists valid vibration severity thresholds for these two combinations. After the correct measurement options were set, the appropriate option for the machine to be measured (group 1 or 2, rigid or flexible mounting) can be selected in this sub menu. When this function is enabled, the name of the enabled group is displayed at the bottom of the main screen together with four color coded items which represent the four vibration severity zones. The current measurement value shown on the screen is compared against the thresholds described in the ISO standard and is automatically color coded according to the thresholds. Additionally, the item which represents the current zone flashes periodically so the vibration severity can be quickly determined. If the automatic evaluation is currently enabled and an incompatible measuring unit (acceleration) or parameter (peak, peak-peak, crest factor) is activated, the evaluation function is automatically disabled and a corresponding hint is displayed on the screen.

As described previously the automatic evaluation function requires the measuring unit velocity or displacement in conjunction with the parameter RMS. Otherwise the menu to enable this function cannot be opened and the following hint is displayed on the screen.

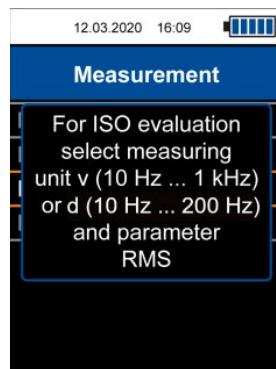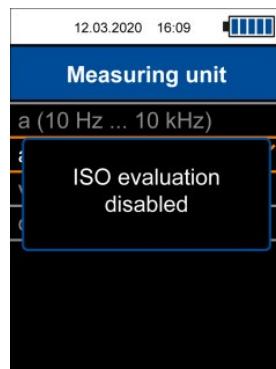

Machine groups:

» Group 1:

Large machines with nominal power >300 kW;

Electrical machines with shaft height >315 mm

These machines generally have plain bearings and the relatively high rated/operating speeds range from 120 min⁻¹ to 15,000 min⁻¹

» Group 2:

Medium-sized machines with nominal power between 15 kW and 300 kW;

Electrical machines with shaft height 160 mm <H <315 mm.

Vibration velocity		Group 1		Group 2	
mm/s	in/s	rigid	flexible	rigid	flexible
> 11.0	> 0.43	D	D	D	D
7.1 ... 11.0	0.28 ... 0.43	D	C	D	D
4.5 ... 7.1	0.18 ... 0.28	C	B		C
3.5 ... 4.5	0.14 ... 0.18	B		C	
2.8 ... 3.5	0.11 ... 0.14			C	
2.3 ... 2.8	0.09 ... 0.11			B	
1.4 ... 2.3	0.06 ... 0.09	A			A
< 1.4	< 0.06			A	

Vibration severity zones for vibration velocity according to DIN ISO 10816-3

Vibration displacement		Group 1		Group 2	
µm	mil	rigid	flexible	rigid	flexible
> 140	> 5.51	D	D	D	D
113 ... 140	4.45 ... 5.51	D	C	D	C
90 ... 113	3.54 ... 4.45				
71 ... 90	2.80 ... 3.54	C	B	C	B
57 ... 71	2.24 ... 2.80				
45 ... 57	1.77 ... 2.24	B		C	
37 ... 45	1.46 ... 1.77			B	
29 ... 37	1.14 ... 1.46				
22 ... 29	0.87 ... 1.14	A			A
< 22	< 0.87			A	

Vibration severity zones for vibration displacement according to DIN ISO 10816-3

5.1.4 Display max value

This sub menu is used to activate the display of the max value function. When enabled the max value during a measurement session is displayed under the current measurement value. The BACK button can be used to reset the max value.


5.2 Calibration

A vibration calibrator capable of generating a reference vibration of 10 mm/s RMS at 159.2 Hz is required for the calibration of the vibration meter. The calibration can be started via the sub menu Calibration. A code is required to enter this menu in order to prevent an inadvertent overwrite of the current calibration. The required code is **1402**.

The first screen shows the hint regarding the required reference vibration and the sensor of the vibration meter needs to be mounted on the vibration calibrator.



After turning on the vibration calibrator and -if required- setting the reference vibration, the calibration can be continued with the OK key. This opens the calibration screen. This screen shows the required characteristics of the reference vibration at the top, followed by the current measurement value of the device in green font and in the unit mm/s. It is not necessary to adjust the device measurement parameters specifically for the calibration as only the RMS value of the vibration velocity is evaluated for the calibration.

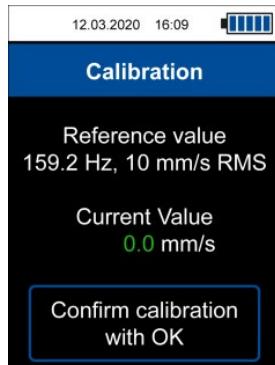

ATTENTION: Verify that the required reference vibration is generated by the vibration calibrator before the calibration is performed!

If the current measurement value in relation to the reference vibration exceeds the desired tolerance, the device can perform a calibration which can be started by pressing the OK key on the calibration screen and confirming the subsequent dialogue.



The calibration is performed autonomously by the device and should take less than 5 seconds. When the calibration is finished, a pop-up window is displayed with a hint that the calibration was successful. After a short time, the device returns to the main measurement screen.

5.3 Settings

5.3.1 Units

The measurement unit can be switched between the metric system and imperial units.

5.3.2 Date & time

This menu is used to change the date and time which is displayed in the status bar at the top of the screen. The date format can also be changed.

5.3.3 Display brightness

The screen backlight intensity can be adjusted from 10% to 100%.

5.3.4 Language

This menu is used to switch between different menu languages. Available languages include English, German, French, Spanish, Italian, Dutch, Portuguese, Turkish, Polish, Russian, Chinese and Japanese.

5.3.5 Auto power off

This option enables the auto power off function. Available time periods include 1 minute, 5 minutes and 15 minutes. After the set time period has elapsed, the device will automatically turn off and any button press will reset the timer. It is also possible to disable the auto power off function.

5.3.6 Device reset


This menu is used to reset the device to its factory settings. Device settings are separate from the calibration and each can be reset individually by selecting the corresponding menu item.

A reset of the device settings will load default measurement parameters and reset any remaining menu option to the factory default values. A calibration which may have been performed beforehand is retained. In order to prevent an inadvertent reset of the calibration, a code is required to enter this menu.

The code is **1402**.

ATTENTION: If a reset of the calibration is performed, the previously performed calibration will be deleted and a default value for the sensor sensitivity will be selected. It is recommended to perform a calibration after the reset.

The reset must be confirmed via the subsequent confirmation dialogue when one of the reset options is selected. The device will perform a restart after the reset has been performed.

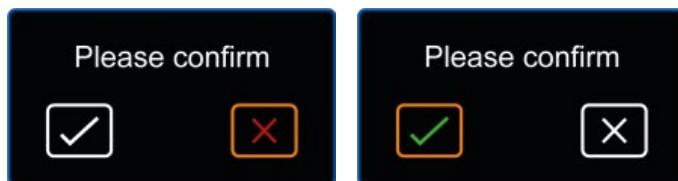

5.4 Manual

This sub menu leads to a screen with a QR code. This code can be decoded with a suitable scanner like e.g. a mobile phone and it contains a link which directly leads to the manual of the PCE-VT 3700 for easy access.

5.5 Info

This sub menu shows a screen with the device name and firmware version.

6. OPERATION

6.1 Measurement screen

After turning on the device, the main measurement screen is displayed. The mechanical vibration is converted by the sensor into an electrical signal which is subsequently evaluated according to the measurement settings. The result is displayed as the measurement value on the screen and is continually updated with the current value.

Default measurement settings (first start or after reset of device settings) consists of the RMS value of vibration velocity in mm/s. When measurement settings are adjusted via the menu, the changes are applied when the screen is returned to the measurement screen and the changes are reflected on the display accordingly.



6.2 Preparation

Depending on the application and machine to be measured, the desired measurement settings need to be set with the menu. These settings include measuring unit, parameter, units and possibly ISO evaluation or max value.

6.3 Perform measurement

The sensor needs to be attached the desired position to perform a measurement. It can be mounted either with a stud bolt or the magnet adapter. If the measuring tip is used in conjunction with the sensor instead of either mounting option, the sensor should be placed as vertical as possible on the measurement surface in order to receive an accurate result.

The measurement is performed continuously by the device when on the main measurement screen and no further user input is required.

If the ISO evaluation function is enabled, the current measurement value is color coded with regards to the selected thresholds. Additionally, the corresponding vibration severity zone at the bottom of the display flashes periodically which allows for quick identification of the current vibration severity.

6.4 Stethoscope function (PCE-VT 3750 / PCE-VT 3750S only)

Connect the PCE-VT 3x5x HEADPHONE headphones to the vibration meter via the 3.5 mm jack socket. If the measuring device is not switched on, switch it on. You can now mount the vibration sensor at different measuring points or scan the measuring points with the measuring tip. The machine noise can now be heard via the headphones. The volume can be adjusted via the rotary control on the earpiece.

DISPOSAL

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose. In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law. For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations. If you have any questions, please contact Drive Test.

CONTACT INFORMATION

Germany

PCE Deutschland GmbH
Im Langel 26
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

United Kingdom

PCE Instruments UK Ltd
Trafford House
Chester Rd, Old Trafford
Manchester M32 0RS
United Kingdom
Tel: +44 (0) 161 464902 0
Fax: +44 (0) 161 464902 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

The Netherlands

PCE Brookhuis B.V.
Twentepoort West 17
7609 RD Almelo
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

France

PCE Instruments France EURL
23, rue de Strasbourg
67250 Soultz-Sous-Forêts
France
Téléphone: +33 (0) 972 3537 17
Numéro de fax: +33 (0) 972 3537 18
info@pce-france.fr
www.pce-instruments.com/french

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telephone: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

United States of America

PCE Americas Inc.
1201 Jupiter Park Drive, Suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

Spain

PCE Ibérica S.L.
Calle Mula, 8
02500 Tobarra (Albacete)
España
Tel.: +34 967 543 548
info@pce-iberica.es
www.pce-instruments.com/espanol

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish

Denmark

PCE Instruments Denmark ApS
Birk Centerpark 40
7400 Herning
Denmark
Tel: +45 70 30 53 08
kontakt@pce-instruments.com
www.pce-instruments.com/dansk

Subject to change without notice