

RLK8-CX410B4

Smart 2K 8-Channel PoE Security Camera System with ColorX Night Vision, Smart Detection, Secure Local storage with Pre-Installed 2TB HDD, 24/7 Continuous Recording, Two-Way Audio, Easy Plug & Play.

- True Color Night Vision in the Dimmest Light
- F1.0 Super Aperture
- Person/Vehicle/Animal Detection
- 8CH NVR with 2TB HDD



Specifications

Video & Audio	
Image Sensor	1/1.8" CMOS Sensor
Video Resolution	Default: 2560*1440 (4.0 Megapixels)@30fps
Lens	f=4mm F=1.0
Video Compression	H.264
Field of View	Horizontal: 89° Vertical: 46°
Color Night Vision	4pcs/3W/3000K/400Lumens
Audio	Two-Way Audio
Power	
PoE	IEEE 802.3af, 48V Active

DC Power	DC 12.0V $\frac{1}{3}$ 1A, <12W
Interface	
Power	DC Power Port
System	Reset Button
Ethernet	One 10M/100Mbps RJ45
Storage	MicroSD Card Slot (Max. 256GB)
Audio	Built-in Microphone & Speaker
Software Features	
Frame Rate	Main Stream: 2fps - 30fps(default: 25fps) Sub Stream: 4fps - 15fps(default: 10fps)
Code Rate	Main Stream: 2048Kbps -6144Kbps(default: 4096Kbps) Sub Stream: 64Kbps - 512Kbps(default: 256Kbps)
Browser Supported	Edge, Chrome, Firefox, Safari
OS Supported	PC: Windows, Mac OS; Smartphone: iOS, Android
Smart Alarm	Motion Detection/Human Detection/ Vehicle Detection/Pet Detection
Record Mode	Motion Record/Schedule Record (Default: Motion Record)
Protocols & Standards	HTTPS, SSL, TCP/IP, UDP, IPv4, UPnP, RTSP, RTMP, ONVIF, SMTP, NTP, DHCP, DNS, DDNS, FTP, P2P
Maximal User Access	20 Users (1 admin account & 19 user accounts); Support up to 12 simultaneous video streams (10 substreams & 2 mainstreams)
Work with	Google Assistant
Working Environment	
Temperature	Operating Temperature: -10°C~+50°C (14°F~122°F)
Humidity	Operating Humidity: 10% ~ 90%

Waterproof	IP 67
Size & Weight	
Dimensions	Φ67 x 187mm
Weight	480g
Warranty	
Limited Warranty	2-year limited warranty. For support, visit https://support.reolink.com/hc/en-us/

Gallery & Specs



- 1. USB Port
- 2. Power LED & HDD LED
- 3. Control Panel




- 1. On/Off Switch
- 2. Network
- 3. RJ45
- 4. Power Input
- 5. Audio Out
- 6. eSATA
- 7. VGA Port
- 8. HDMI Port
- 9. USB Port



1. Bracket
2. Speakers
3. Aluminum Housing
4. Lens
5. Spotlight



1. microSD Card Slot

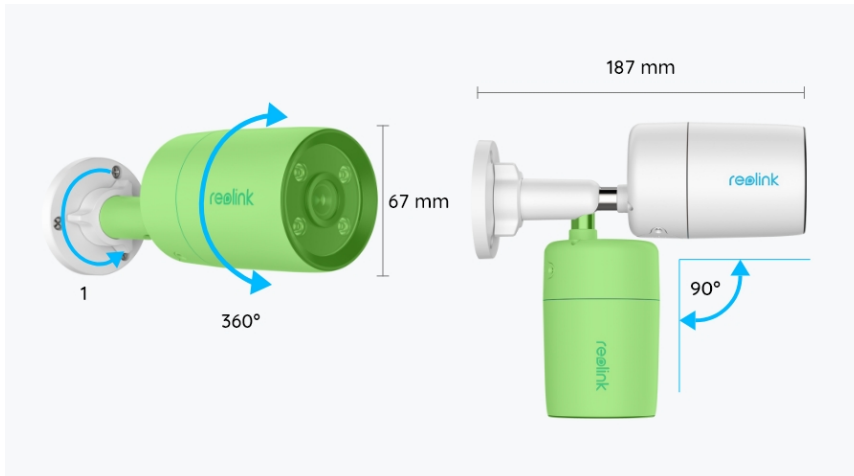

1. Turn the adjustment knob (counter-clockwise) to loosen the bracket and adjust the camera in any direction.
2. Turn the adjustment knob back after adjustment to fix the camera.



1. Power
2. Reset Button
3. Network